

FM/LM Series Up/Down/Up-Down Measure Counter

DIN W72×H72, W144×H72mm of Up / Down / Up-Down measure counter

■ Features

- Selectable Multi / Divide function
- Upgrade counting speed : 1cps, 5kcps
- Selectable voltage input(PNP) or no-voltage input(NPN): Memory protection for 10 years (Using non-voltage semiconductor)
- Decimal point setting(Fixed decimal point of display)
- Wide range of power supply : 100-240VAC 50/60Hz 12-24VAC 50/60Hz, 12-24VDC universal
- Built-in Microprocessor

⚠ Please read "Caution for your safety" in operation manual before using.

■ Ordering information

F	4	A	M	—	2P
				Output	No mark
				Function	2P
				Output	M
				Digit	A
				Size	B
					4
					6
					F
					L

No mark	Single preset
2P	Dual preset
M	Measure function
A	Preset
B	Totalizer(Indicator)
4	9999(4digit)
6	999999(6digit)
F	DIN W72×H72mm
L	DIN W144×H72mm

■ Specifications

Model	Single preset	F4AM	F6AM	—	—
	Dual preset	F4AM-2P	F6AM-2P	L4AM-2P	L6AM-2P
	Totalizer(Indicator)	F4BM	F6BM	L4BM	L6BM
Digit	4digit		6digit	4digit	6digit
Digit size	W8×H14mm		W4×H8mm	W8×H14mm	
Power supply	AC Voltage type	100-240VAC 50/60Hz			
	AC/DC Voltage type	12-24VAC 50/60Hz, 12-24VDC			
Allowable voltage range	90 to 110% of rated voltage				
Power consumption	AC Voltage type	• Indicator: Max. 4.7VA • Single preset: Max. 5.6VA • Dual preset: Max. 6.5VA(100-240VAC 50/60Hz)			
	AC/DC Voltage type	• Indicator: Max. 5.1VA • Single preset: Max. 6VA • Dual preset: Max. 6.5VA(12-24VAC 50/60Hz) • Indicator: Max. 2.7W • Single preset: Max. 3.3W • Dual preset: Max. 3.8W(12-24VDC)			
Max. counting speed	Selectable 1cps/30cps/2kcps/5kcps by internal DIP switch				
Min. signal width	Approx. 20ms				
Input type	CP1,CP2 input	Input logic is selectable [Voltage input] Input impedance : 5.4kΩ, "H" level voltage : 5-30VDC, "L" level voltage : 0-2VDC [No-Voltage input] Impedance at short-circuit : Max. 1kΩ, Residual voltage at short-circuit : Max. 2VDC, Impedance at open-circuit : Min. 100kΩ			
	RESET input				
One-shot output time	• Single preset : 0.5sec. • Dual preset : 0.05 to 5sec.				
Control output	Contact	Type	Single preset : SPDT(1c) Dual preset : Single preset SPST(1a), Dual preset SPST(1a)		Dual preset : Single preset SPDT(1c), Dual preset SPDT(1c)
		Capacity	250VAC 3A resistive load		
	Solid-state	Type	Single preset : 1 NPN open collector output, Dual preset : 2 NPN open collector output		
Capacity		30VDC Max. 100mA Max.			
Memory protection	Approx. 10 years(When using non-volatile semiconductor memory)				
External power	12VDC±10% 50mA Max.				

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area sensor

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

(G) Connector/Socket

(H) Temp. controller

(I) SSR/Power controller

(J) Counter

(K) Timer

(L) Panel meter

(M) Tacho/Speed/ Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching mode power supply

(Q) Stepper motor& Driver&Controller

(R) Graphical Logic panel

(S) Field network device

(T) Software

(U) Other

FM/LM Series


Specifications

Insulation resistance	100MΩ(at 500VDC megger)	
Dielectric strength	2000VAC 50/60Hz for 1 minute	
Noise strength	AC power	±2kV the square wave noise(pulse width : 1μs) by the noise simulator
	DC power	±500V the square wave noise(pulse width : 1μs) by the noise simulator
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 1 hour
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 10 minutes
Shock	Mechanical	300m/s ² (approx. 30G) in each of X, Y, Z directions for 3 times
	Malfunction	100m/s ² (approx. 10G) in each of X, Y, Z directions for 3 times
Relay life cycle	Mechanical	Min. 10,000,000 operations
	Electrical	Min. 100,000 operations(250VAC 3A at resistive load)
Environment	Ambient temperature	-10 to 55°C, storage: -25 to 65°C
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH
Unit weight	AC Voltage type	F4AM: Approx. 273g, F6AM: Approx. 280g, F4AM-2P: Approx. 275g, F6AM-2P: Approx. 282g, F4BM: Approx. 229g, F6BM: Approx. 236g, L4AM: Approx. 505g, L6AM-2P: Approx. 533g, L4AM-2P: Approx. 438g, L6BM: Approx. 445g
	AC/DC Voltage type	F4AM: Approx. 268g, F6AM: Approx. 275g, F4AM-2P: Approx. 270g, F6AM-2P: Approx. 287g, F4BM: Approx. 224g, F6BM: Approx. 231g, L4AM-2P: Approx. 511g, L6AM-2P: Approx. 538g, L4BM-2P: Approx. 444g, L6BM: Approx. 450g


※Environment resistance is rated at no freezing or condensation.

Connections


• F4AM-2P / F6AM-2P

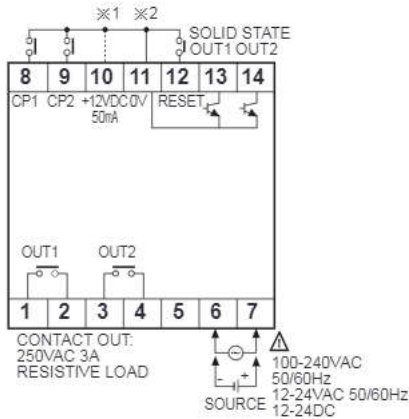


• F4AM / F6AM

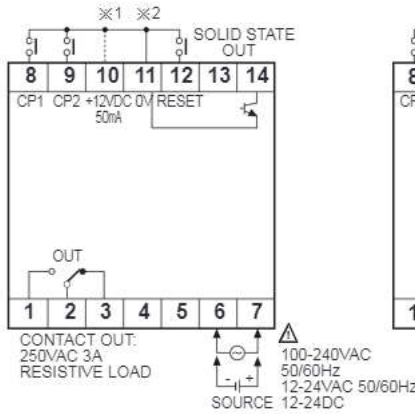


• F4BM / F6BM

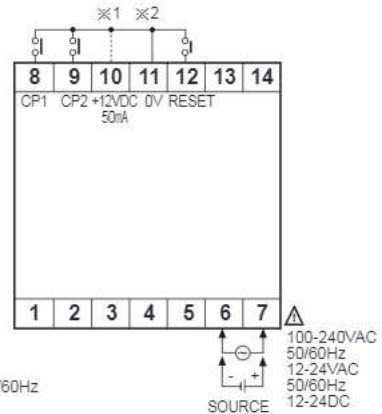

• L4AM-2P / L6AM-2P

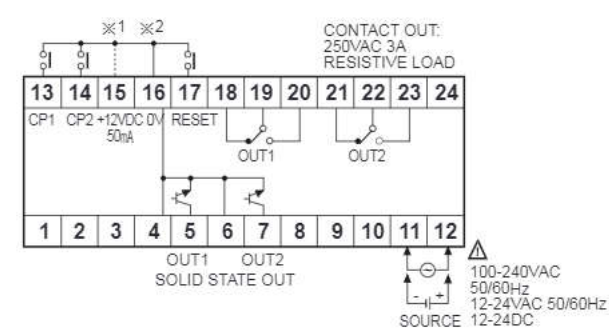

• L4BM / L6BM


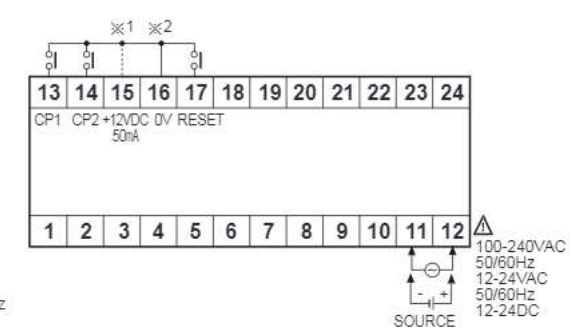


※1: Connection for PNP input in contact input
 ※2: Connection for NPN input in contact input

Up/Down/Up-Down Measure Counter


Dimensions

FM Series

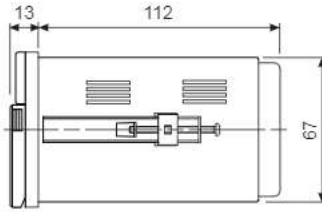
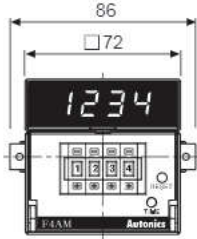


Panel cut-out

(unit: mm)

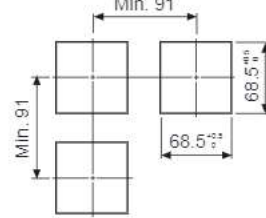


LM Series

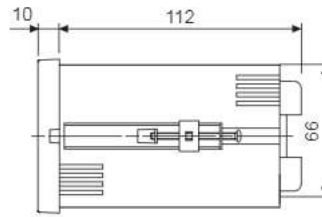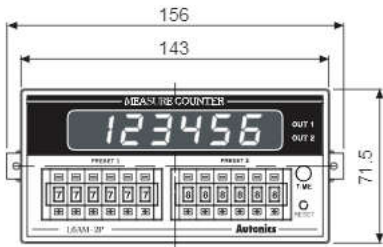

Panel cut-out


(unit: mm)

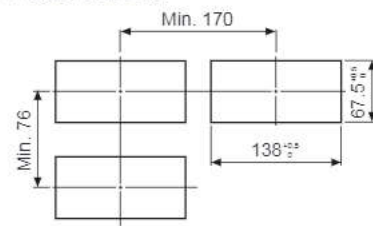


Input connections

No-voltage input(NPN)


Solid-state input(Standard sensor : NPN output type sensor)

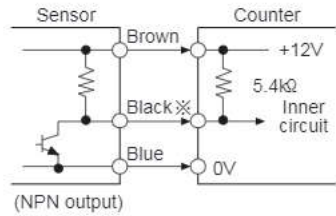

※CP1, CP2, RESET input

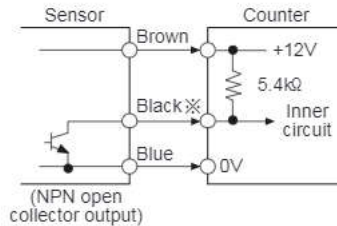


Contact input

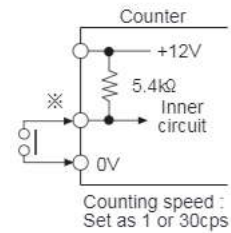


Counting speed : Set as 1 or 30cps

Voltage input(PNP)


Solid-state input(Standard sensor : PNP output type sensor)

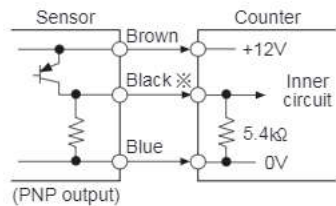

※CP1, CP2, RESET input

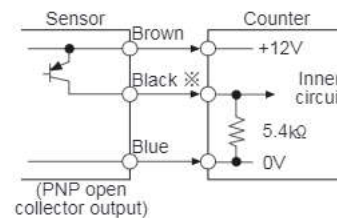

Contact input

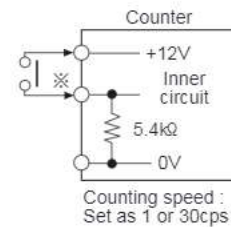


Counting speed : Set as 1 or 30cps

(A)	Photo electric sensor
(B)	Fiber optic sensor
(C)	Door/Area sensor
(D)	Proximity sensor
(E)	Pressure sensor
(F)	Rotary encoder
(G)	Connector/Socket
(H)	Temp. controller
(I)	SSR/ Power controller
(J)	Counter
(K)	Timer
(L)	Panel meter
(M)	Tacho/ Speed/ Pulse meter
(N)	Display unit
(O)	Sensor controller
(P)	Switching mode power supply
(Q)	Stepper motor& Driver&Controller
(R)	Graphical Logic panel
(S)	Field network device
(T)	Software
(U)	Other

FM/LM Series

■ Description of inner DIP switches

● FM Series

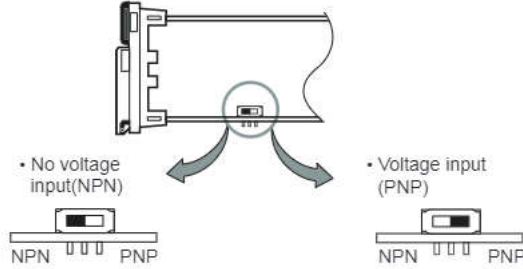

※Please be sure to turn OFF the power before changing input logic.


● LM Series

Input logic is changeable by input logic selection switch located at the terminal block.

- No voltage input(NPN) (NPN) F S (PNP)
- Voltage input(PNP) (NPN) F S (PNP)

■ Input & output connections

○ In case of operating the load by power supply of the sensor

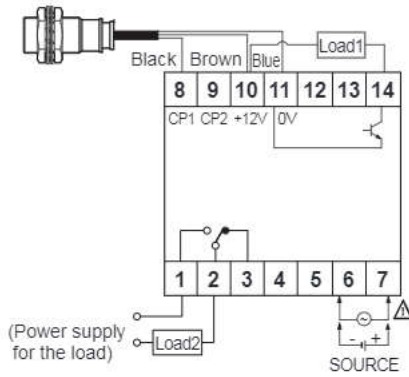


- Please select proper capacity of load, because total value of load capacity and current consumption should not be exceed current capacity(Max. 50mA).


○ How to count by external power supply

This unit start to count when "High" level(5-30VDC) is applied at CP1 or CP2 after selecting PNP. ("Low level" : 0-2VDC)

○ In case of operating the load by external power supply

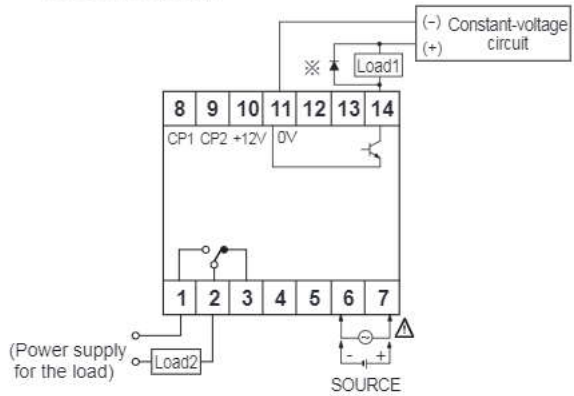


- The capacity of the load must not exceed Max. 30VDC, Max. 100mA of the switching capacity of the transistor.
- Please do not supply the reverse polarity voltage.
- ※In case of using the inductive load(Relay, etc.), please connector the surge absorber(Diode)at both terminals of the load, in case of using the inductive load.

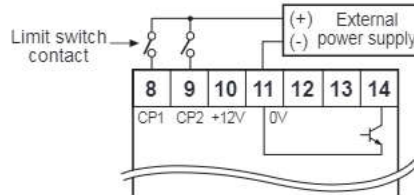

○ Using 2 counters with one sensor


- Please connect as the power of sensor is supplied from only one of counters and design input logic with same way.

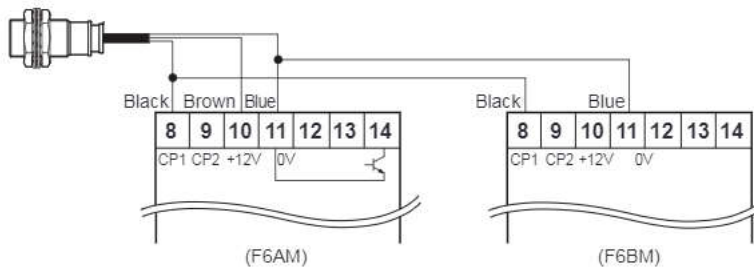



Up/Down/Up-Down Measure Counter

■ Selection by DIP switches

● FM Series

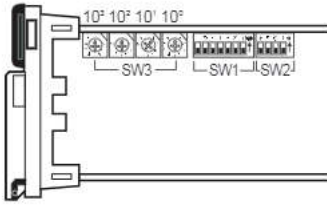

● LM Series

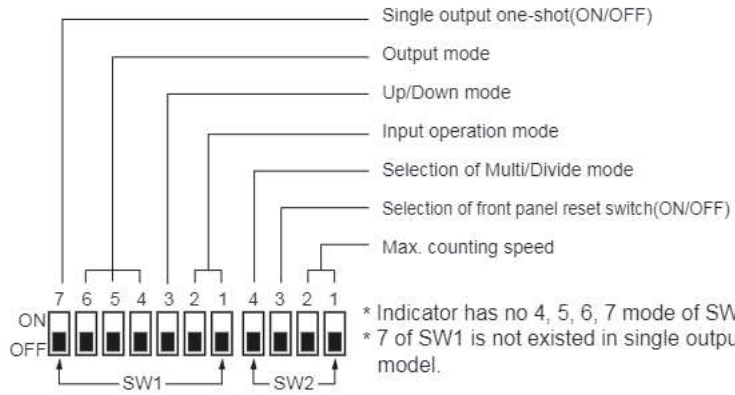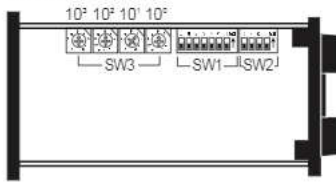

* Indicator has no 4, 5, 6, 7 mode of SW1.
* 7 of SW1 is not existed in single output model.

● Max. counting speed

SW2	Function						
<table border="1"> <tr><td>ON</td><td>1</td><td>2</td></tr> <tr><td>OFF</td><td>■</td><td>■</td></tr> </table>	ON	1	2	OFF	■	■	1cps
ON	1	2					
OFF	■	■					
<table border="1"> <tr><td>ON</td><td>1</td><td>2</td></tr> <tr><td>OFF</td><td>■</td><td>■</td></tr> </table>	ON	1	2	OFF	■	■	30cps
ON	1	2					
OFF	■	■					
<table border="1"> <tr><td>ON</td><td>1</td><td>2</td></tr> <tr><td>OFF</td><td>■</td><td>■</td></tr> </table>	ON	1	2	OFF	■	■	2kcps
ON	1	2					
OFF	■	■					
<table border="1"> <tr><td>ON</td><td>1</td><td>2</td></tr> <tr><td>OFF</td><td>■</td><td>■</td></tr> </table>	ON	1	2	OFF	■	■	5kcps
ON	1	2					
OFF	■	■					

※Factory default : 30cps

● Reset switch of front panel

SW2	Function				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	Use
ON	■				
OFF	■				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	Not used
ON	■				
OFF	■				

※Factory default : Not used

● Measure function

SW1	Function				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	Multi mode
ON	■				
OFF	■				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	Divide mode
ON	■				
OFF	■				

※Refer to the J-75 for "■ Measure Counter".
※Factory default : Divide mode(SW3:0001)

● Up/Down mode selection

SW1	Function				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	Up mode
ON	■				
OFF	■				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	Down mode
ON	■				
OFF	■				


※Factory default : Up mode

● Single output one-shot(ON/OFF)

SW1	Function				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	One-shot output
ON	■				
OFF	■				
<table border="1"> <tr><td>ON</td><td>■</td></tr> <tr><td>OFF</td><td>■</td></tr> </table>	ON	■	OFF	■	Retained output
ON	■				
OFF	■				

※Default : Retained output
※This mode selects one-shot output(0.5sec.) or remained output (until 2nd output turns off) for 1st output in the dual preset counter.

※ Example of F output operation mode

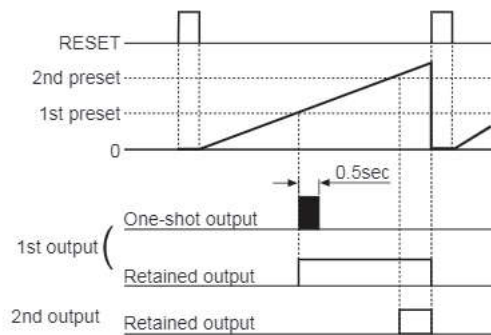

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter**
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/ Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching mode power supply
- (Q) Stepper motor& Driver&Controller
- (R) Graphical/Logic panel
- (S) Field network device
- (T) Software
- (U) Other

FM/LM Series

Measure Counter


Measure counter sets multiply or divide integer per 1 pulse input.

SW2	Function
4 ON <input type="checkbox"/>	Multi
4 OFF <input checked="" type="checkbox"/>	

Multi Mode

It multiplies the inner SW3 setting value at a count input signal and displays it.

 Input signal(N) × SW3 preset value = Indication value




$\therefore N \times 4 = 4, 8, 12 \dots (N=1, 2, 3 \dots)$

SW2	Function
4 ON <input checked="" type="checkbox"/>	Divide
4 OFF <input type="checkbox"/>	


Divide Mode

It displays as 1 when the count input signal is entered as preset value of inner SW3.

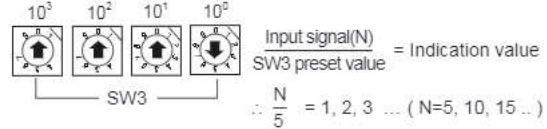

(Note) Please be cautious the error can be occurred when down count is executed during up count.


Setting function of Decimal point

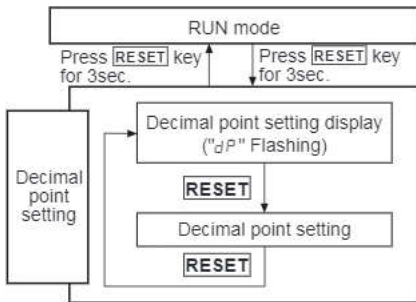


- ※It advances to "Decimal point setting mode" if press RESET key for 3sec.
- ※It returns to RUN mode by press RESET key for 3sec in "Decimal point setting mode".
- ※It returns to RUN mode if no RESET button or digital switch(Dual-setting digital switch for dual preset type) is applied for 60sec. in the "Decimal point setting mode".
- ※The decimal point setting is not existed in indicator.

Decimal point setting

 The decimal point setting of 6digits indicator



 
The decimal point setting of 4digits indicator




- ※When it enters to the "Decimal point of setting mode, the prior decimal setting status is displayed.
- ※In the decimal point setting mode, when pressing one of the Up(▲) button of digital switch(Dual-setting digital switch for dual preset type), the point is moved to left direction and it is moved to right direction when one of Down(▼) button of digital switch (Dual-setting digital switch for dual preset type).

Counting operation of indication type


Up mode

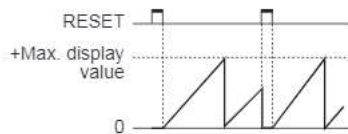


Down mode

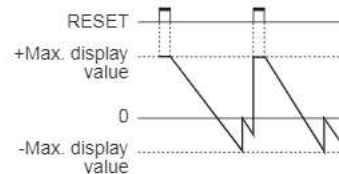

Up / Down-A, B, C mode

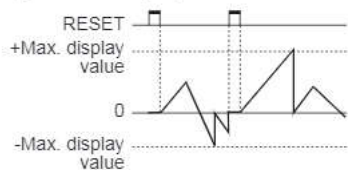

Up / Down-D, E, F mode

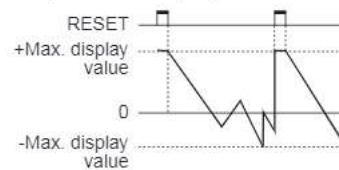

Up/Down/Up-Down Measure Counter

Input operation mode

Input mode(SW1)		SW1	No-voltage input type(NPN)	Voltage input type(PNP)
Up mode	Up/Down-A (Command input)	ON		
	Up/Down-B (Individual input)	ON		
	Up/Down-C (Phase difference input)	ON		
	Up (Count up input)	ON		
Down mode	Up/Down-D (Command input)	ON		
	Up/Down-E (Individual input)	ON		
	Up/Down-F (Phase difference input)	ON		
	Down (Count down input)	ON		

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter**
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/ Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching mode power supply
- (Q) Stepper motor& Driver&Controller
- (R) Graphical Logic panel
- (S) Field network device
- (T) Software
- (U) Other

※⊙: Over min. signal width, ⊙: Over 1/2 of min. signal width.
 If the signal width of ⊙ or ⊙ is less than min. signal width, ±1 of count error is occurred.

FM/LM Series

Output operation mode

				※ The output of single preset type is operated at the status of the second output mode
Output mode (SW1)	4 ON OFF	4 ON OFF	Operation after count up	
	Up mode Up, Up/Down-A, B, C mode	Down mode Down, Up/Down-D, E, F mode		
N			The display value continues until Reset signal applied and the output is held. <ul style="list-style-type: none"> 1st retained output and 2nd output are maintained until Reset signal is applied. When using 1st output as one-shot output, it will return after operating for 0.5sec. 	
C			Display value and retained output are maintained until Reset signal is applied. <ul style="list-style-type: none"> When using 1st output as one-shot output, it will return after operating for 0.5sec. 	
R			The display value will be Reset Start status as soon as it reaches to 2nd setting value. <ul style="list-style-type: none"> 1st retained output will be OFF after 2nd one-shot output. 1st one-shot output will be reset after operating 0.5sec., and it is not related to 2nd output. 	
K			The display value will be held until 2nd output is OFF then reset. <ul style="list-style-type: none"> 1st retained output will be OFF after 2nd one-shot output. 1st one-shot output will be reset after operating 0.5sec., and it is not related to 2nd output. 	
P			The display value continues until Reset signal applied. <ul style="list-style-type: none"> 1st retained output will be OFF after 2nd one-shot output. 1st one-shot output will be reset after operating 0.5sec., and it is not related to 2nd output. 	
Q			The display value will be Reset Start status as soon as it reaches to 2nd setting value. <ul style="list-style-type: none"> 1st retained output will be OFF after 2nd one-shot output. 1st one-shot output will be reset after operating 0.5sec., and it is not related to 2nd output. 	
S	Up input 	Down input 	The display continues until 2nd output is OFF. <ul style="list-style-type: none"> 1st retained output will be OFF after 2nd one-shot output. 1st one-shot output will be reset after operating 0.5sec. not related to 2nd output. 	
	Up/Down-A, B, C 	Up/Down-D, E, F 	<ul style="list-style-type: none"> Up, Up/Down-A, B, C input mode <ul style="list-style-type: none"> OUT1 is ON when(Display value) ≥ (1st setting value) OUT2 is ON when(Display value) ≥ (Dual setting value) Down, Up/Down-D, E, F input mode <ul style="list-style-type: none"> OUT1 is ON when(Display value) ≤ (1st setting value) OUT2 is ON when(Display value) ≤ (Zero) 	

※One-shot output time is set by front TIME adjuster.

Up/Down/Up-Down Measure Counter

■ Proper usage


○ Reset function

● Reset

In case of changing the input mode after supplying the power, please take an external reset or manual reset.
If reset is not executed, the counter will be working as previous mode.

● Reset signal width


It is reset perfectly when the reset signal is applied during **min. 20ms** regardless of the contact input & solid-state input.

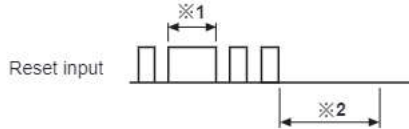

※1: In case of a contact reset, it is reset perfectly if the ON time of reset signal is applied during min. 20ms even though a chattering is occurred.

※2: It can be input the signal of CP1 & CP2 after min. 50ms from closing time of reset signal.

○ Min. signal width

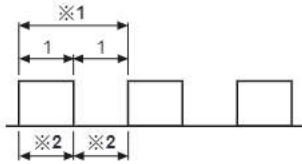


※1: Please make duty ratio(ON/OFF) 1:1.

※2: Min. signal width

- 1cps : Min. 500ms
- 30cps : Min. 16.7ms
- 2kcps : Min. 0.25ms
- 5kcps : Min. 0.1ms

○ Max. counting speed

This is a response speed per 1 sec. when the duty ratio(ON:OFF) of input signal is 1:1. If the duty ratio is not 1:1, the width between ON and OFF should be over min. signal width and the response speed is getting slower against input signal. If either ON or OFF signal is shorter than minimum signal width, this product may not respond.

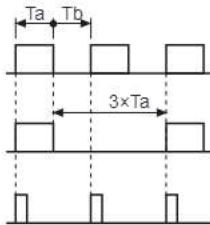

Ta(ON width) and Tb(OFF width) need to be over min. signal width.

Max. counting speed is 1/2 value of rated spec. when duty ratio is 1:3. It can not respond if it is smaller than min. signal width(Ta).

○ Error display

Error signal	Error description	Returning method
Err 0	The state that second preset is 0	Change the setting value to non zero status


※When Error is displayed, the output continues OFF state.
 ※1st output maintains OFF status by set 1st setting value as 0.
 ※There is no Error function in indicator.

○ Detach the case from body

Cut OFF the power to the counter before detaching the case.


● FM Series

Unscrew the front bolt, and pull the body forward.

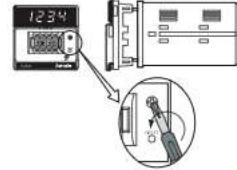


● LM Series

Unscrew the rear bolt, and pull the body forward.

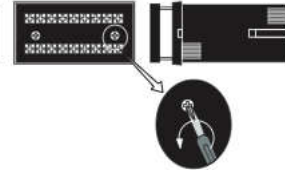

○ Power

 ● The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.



● Please use the power within rated power and apply or cut the power at once to prevent from chattering.



○ Input signal line

● Shorten the cable distance between the sensor and this product.
 ● Please use shield wire for input signal needed to be long.
 ● Please wire input signal line separated from power line.

○ Test circuit dielectric, impulse voltage and measure insulated resistor by installing in control panel

● Separate the unit from control box circuit.
 ● Short-circuit all terminals in terminal block.

○ Do not use this unit at below places.

● Place where there are severe vibration or impact.
 ● Place where strong alkalis or acids are used.
 ● Place where there are direct rays of the sun
 ● Place where strong magnetic field or electric noise are generated.

○ Installation environment

● It shall be used indoor
 ● Altitude Max. 2000m
 ● Pollution Degree 2
 ● Installation Category II

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/Power controller
- (J) Counter**
- (K) Timer
- (L) Panel meter
- (M) Tacho/Speed/ Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching mode power supply
- (Q) Stepper motor& Driver&Controller
- (R) Graphical Logic panel
- (S) Field network device
- (T) Software
- (U) Other