



144 x 144mm

Features:

- 1 phase current sensing
- LED Type 4 digits
- Supports Intelligent Algorithm
- Automatically switches between various capacitor banks
- 8 steps
- Dual Password Protection
- Configurable alarm setting
- Alarm indication on display

Certifications: 

Display Specifications

Type	7 Segment LED
Digits	4 digits 1 Row
No. of LED	8 + 1 + 1

Input Specifications

Rated Input Voltage	40-300V (L-N), 50-530V (L-L)
Rated Input Current	Nominal 5A AC (Min 50mA, Max 6A)
Frequency	45-65 Hz
Burden	20 mOhm
Wiring Input	L-L / L-N
Accuracy	Power factor: ± 0.01
Measurement Range	
Power Factor	0.8 lag to 0.8 lead
Alarm Indications	
	Over Voltage, Under Voltage, Under Compensate, Over Compensate, CT Polarity Error, Current Absent indication
Settable Parameters	
CT Primary	1 / 5A to 9999A (Programmable for any value)
CT Secondary	1 or 5A (Programmable)

Output Specifications

Output Contacts	NO, One common point Max fuse 6A
Steps	1 to 8 / 12
Relay Contact	5A @ 250VAC (Max)

Auxiliary Supply Specifications

Input voltage range	90 - 550VAC
Consumption	15VA max
Frequency	50-60 Hz

Control Specifications

Target PF	0.8 lag to 0.8 lead
Control Sensitivity	55 to 100%
Step time	1 to 999 sec
Discharge time	1 to 999 sec
Switching program	Automatic / Linear / Rotational
Control Mode	Automatic / Manual
Auto initialization	Yes / No


Environmental Specifications

Temperature	Operating	0 °C to 60 °C
	Storage	-20 °C to 60 °C
Humidity	0% to 95% without moisture consideration	


Mechanical Specifications

Mounting	Panel mount
Weight	APFC147-108 : 400gms

Dimensions(in mm)

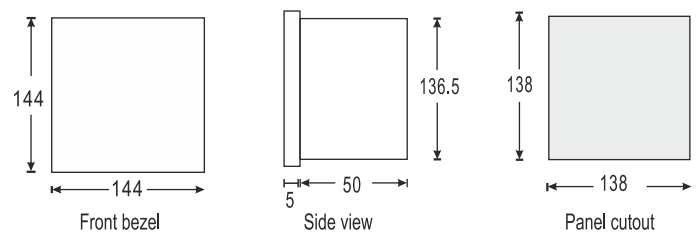

Terminal Connections

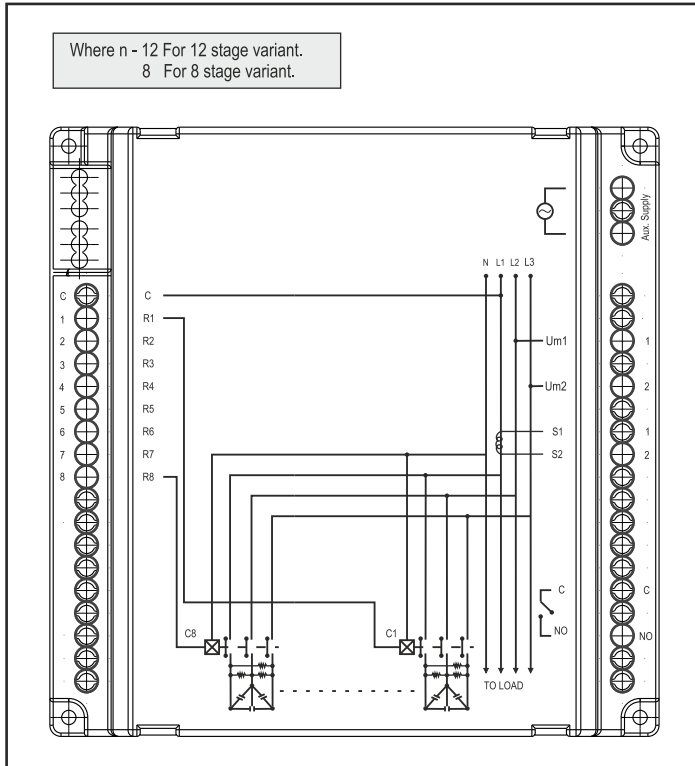

Ordering Information

Product Code	Supply Voltage	No. of stages	Certification
APFC147-108-90 / 550VCE	90 - 550 VAC, 50/60Hz	8	CE

Compliance

Applicable EMI / EMC Standards		
Product Standard : IEC 61326-1		
Category		Standards Compliance
ESD Immunity	IEC 61000-4-2	Level IV (Air discharge : 15kV), (Contact Discharge : -8kV)
Surge Immunity	IEC 61000-4-5	+/- 2kV common mode, (Line to ground) +/- 1kV differential mode, (Line to Line)
Radiated Susceptibility	IEC 61000-4-3	Level III, 80 to 1000MHz (10V/m) Level II, 1.4GHz to 2GHz (3V/m) Level I, 2GHz to 2.7GHz (1V/m)
Conducted Susceptibility	IEC 61000-4-6	Level II (3V/m)
Voltage Dips and Interruptions	IEC 61000-4-11	Dips : 0% residual voltage / 1 cycle (Criteria B), 40% residual voltage / 10 cycles 50Hz / 12 cycles 60Hz (Criteria C) 70% residual voltage / 25 cycles 50Hz / 30 cycles 60Hz (Criteria C) Interruptions : 0% residual voltage / 250 cycles 50Hz / 300 cycles 60Hz (Criteria C)
Conducted Emission	CISPR-11	
Radiated Emission	CISPR-11	
Electrical Fast Transient	IEC 61000-4-4	Level III (2kV)

PRODUCT PROFILE



144 x 144 x 50mm

SPECIFICATIONS

Display : 4 Digit, 7 Segment LED display, height : 0.56"

Auxiliary Supply : 90-550V AC, 50-60Hz

Rated input voltage : 40-300V(L-N), 50-530V(L-L), 45-65Hz

Rated input current : Nominal 5A AC (MIN 50mA, MAX 6A), Single CT Sensing

Burden : 20 mOhms

CT Primary : 1-9999A(For CT.S=1); 5-9999A(For CT.S=5)

CT Secondary : 1 or 5A

No. of relay stages : For APFC147-108 : 8 Relay
For APFC147-112 : 12 Relay

Trip indication : Alarm relay turns ON & ALM (Alarm) LED blinks
(Refer LED indication chart)

Controlling Range : Target PF : 0.8lag to 0.8lead
Control sensitivity : 55 to 100%
Step time : 1 to 999Sec
Discharge time : 1 to 999 Sec
Switching program : Automatic/Linear/Rotational
Control Mode : Automatic/Manual
Auto initialization : Yes / No

Output : Relay output
Alarm mode : Under voltage, Over voltage, CT polarity error
Under compensate, Over compensate

Programmable Hysteresis : Voltage : 1 to 10%
Power Factor : 1 to 5%

Power Consumption : 15 VA max.

Environmental Condition : Operating : 0°C to 60°C
Storage : -20°C to 60°C

Humidity : 0% to 95% without moisture consideration

Accuracy :

Measurement	Accuracy
Power factor	±0.01

Mounting : Panel Mounting

Weight :

APFC147-112	420gms
APFC147-108	400gms

SAFETY PRECAUTIONS

All safety related codification, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not handled in a manner specified by the manufacturer, it might impair the protection provided by the equipment.

CAUTION : Read Complete instruction prior to installation and operation of the unit.

WARNING : Risk of electric shock.

WIRING GUIDELINES

- To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
- Wiring shall be done strictly according to the terminal layout. Confirm that all connections are correct.
- Use pin type lugged terminals.
- To eliminate electromagnetic interference, use wires with adequate ratings and twists of the same in equal size shall be made.
- Cables used for connection to power source, must have a cross section of 1.5mm². These wires shall have current carrying capacity of 5A.

MAINTENANCE

- The equipment should be cleaned regularly to avoid blockage of ventilating parts.
- Clean the equipment with a clean soft cloth. Do not use Isopropyl alcohol or any other cleaning agent.


INSTALLATION GUIDELINES

CAUTION

- This equipment, being built-in type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the user end after installation and internal wiring.
- Conductors must not come in contact with the internal circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- Before disconnecting the secondary of the external current transformer from the equipment, make sure that the current transformer is short circuited to avoid risk of electrical shock and injury.
- The equipment shall not be installed in environmental condition other than those mentioned in this manual.
- Thermal dissipation of equipment is met through ventilation holes provided on chassis of equipment. Such ventilation holes shall not be obstructed else it can lead to a safety hazard.
- Connector screw must be tightened after installation.

MECHANICAL INSTALLATION / DIMENSIONS

- Prepare panel cut out with proper dimensions as shown in the figure.
- Push the unit into the panel cutout. Secure the meter in its place by pushing the clamp on the rear side. The screw of the panel clamp must be in the farthest forward slot.
- For proper sealing tighten the screw evenly with required torque.

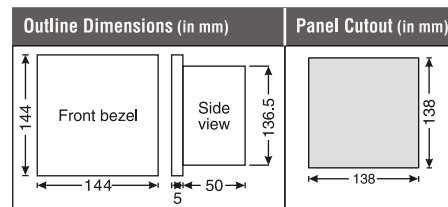


CAUTION

The equipment in its installed state must not come in close proximity to any heating sources, caustic vapors, oils, steam or other unwanted process byproduct.

EMC GUIDELINES

- Use proper input power cables with shortest connections and twisted type.
- Layout of connecting cables shall be away from any internal EMI source.

FRONT PANEL DESCRIPTION

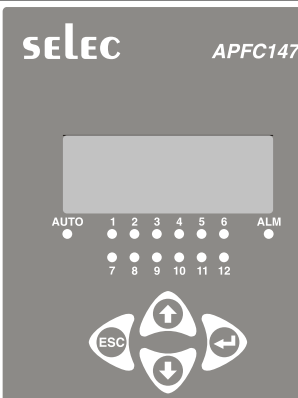

CONFIGURATION

There are 4 dedicated keys (ESC, up, down, left) to enter into configuration menu / change setting.

KEY DESCRIPTION

Press ESC & up	For 3 sec to enter or exit from the configuration menu.
Press up	For increment
Press down	For decrement
Press left	To save the setting and move on to next page
Press ESC	To go back

Note : The setting should be done by a professional after going through this operating manual.

LED INDICATIONS

LED	DESCRIPTION
1 to "X" [X = 8 or 12]	Capacitor Banks that are ON.
AUTO	Indicates controller is in AUTO mode.
AUTO	Indicates controller is in MANUAL mode.
ALM	No fault condition present.
ALM [Blinking]	Fault condition occurred [Press ENTER key to display trip parameter.]
ALM	This will take place when user will press ENTER key in fault condition. Trip parameters will be displayed for 3sec each.

NOTE :
On occurrence of any new fault condition ALM LED starts blinking again & on pressing ENTER key all trip parameters will be displayed for 3sec each.

SERIAL NUMBER DESCRIPTION

Press ESC () key for 10sec. to display 8 digit serial number.

Example : Sr. No. 12345678

Press ESC () key for 10sec.	Displays 1234 for 3 sec.
	After 3 sec. displays 5678 for 3 sec.

USER GUIDE

a) Manual switching (MANL)

When this switching program is selected, the capacitor steps are controlled manually by the user.

b) Rotational switching (ROTN)

This switching program is based on rotational first-in-first-out sequence. This option will automatically switch in and out the capacitors according to the targeted power factor, sensitivity setting and the re-connection time setting.

c) Automatic switching (AUTO)

This automatic switching program uses intelligent switching sequence. The step switching sequence is not fixed and the program automatically selects the most appropriate steps to switch in or out in order to achieve shortest reaction time with minimum number of steps.

d) Linear switching (LINR)

In this switching sequence it works in last in first out mode. This option will automatically switch in and out the capacitors according to the targeted power factor, sensitivity setting and the re-connection time setting.

CONFIGURATION MENU

MAIN MENU	LEVEL	SUB MENU
Installation Password (PW1)		Change Password Yes / No New Password CT Primary CT Secondary Network Selection Phase Compensation Nominal Voltage Threshold Voltage CPYd NPYd CLP CLS NETY PCAR VOLTE UETH
	LE-1	Auto Initialization Max Relay No. Mode Switching Program Target P.F Step Time Discharge Time Control Sensitivity Setting Low Current Setting A.INTE RLY MODE SYPC LPPF STEPL D15TE CSNS LCUR
		<ul style="list-style-type: none"> After entering into PW1, sub menu of LE-1 will be selected. To scroll through sub menu press increment or decrement key.
Technical Password (PW2)		Change Password Yes / No New Password CT Primary CT Secondary Network Selection Phase Compensation Nominal Voltage Threshold Voltage CPYd NPYd CLP CLS NETY PCAR VOLTE UETH
	LE-1	Auto Initialization Max Relay No. Mode Switching Program Target P.F Step Time Discharge Time Control Sensitivity Setting Low Current Setting A.INTE RLY MODE SYPC LPPF STEPL D15TE CSNS LCUR
	LE-2	Over Voltage Setting Under Voltage Setting Over Compensation Under Compensation CT Polarity Error Hysteresis Voltage OULTE OUS UULTE UUS OCAP UCAP CTER HULTE
	LE-3	Bank 1 Bank 2 Bank 3 Bank 4 Bank 5 Bank 6 Bank 7 Bank 8 Bank 9 Bank 10 Bank 11 Bank 12 RLO1 RLO2 RLO3 RLO4 RLO5 RLO6 RLO7 RLO8 RLO9 RLO10 RLO11 RLO12
		* NOTE : LE-3 will be prompted only when mode is set to manual in LE-1. * Applicable only for APFC147-112
		<ul style="list-style-type: none"> After entering into PW2, all levels can be accessed. Press ESC Key to change the level. Different level can be selected by pressing increment & decrement Key.

Note : Appearance of shaded menus dependent on selection of other parameters.

LEVEL 1				
Display	Description	Default Value	Range	Condition
PSWD	Password	10(PW1); 11(PW2)	0000 - 9999	
C.PWD	Change Password	No	NO / YES	
N.PWD	New Password	0	0000 to 9999	This option will be prompted only when C.PWD set to YES.
CT.P	CT Primary	5A	5 to 9999A	1 to 9999 (CT.S=1) 5 to 9999 (CT.S=5)
CT.S	CT Secondary	5A	1A / 5A	
NETW	Network Selection	L-L	LN / LL	
PCMA	Phase compensation	90°	0°, 90°, 120°, 210°, 240°, 330°	
VOLT	Nominal Voltage	240V (L-N) 415V (L-L)	50V-550V	
V.TH	Voltage Threshold	0%	0% to 100%	
A.INT	Auto Initialization	Yes	NO / YES	
* RLY	Max Relay Numbers	8/12	3 to 8/12	
MODE	MODE	AUTO	AUTO / MANL	
SWPG	Switching Program	AUTO	Automatic (AUTO)	
			Linear (LINR)	
			Rotational (ROTN)	
T. PF	Targeted P. F	1.000	-0.800 to 0.800	
STP.T	STEP TIME	5	1s to 999s	
DIS.T	Discharge time (Reconnection time)	180	1s to 999s	
C.SNS	C/K Setting	60	55% to 100%	
L.CUR	Low Current Setting	0	0-50%	

* 8 Relay : Applicable only for APFC147-108
12 Relay : Applicable only for APFC147-112

NOTE :


- Auto - Initialization (A.INT) is working at best, under stable load conditions.
- Auto - Initialization (A.INT) works only with capacitor banks and not with reactors.
- A.INT will be update to 'NO' automatically in configue after auto initialization.
- Reauto - Initialization will be done by only changing A.INT - Yes in configue manually.
- If V.TH value is set to zero, A.IN will be done only at power ON.
- Recommended that number of relays not to be changed during normal operation. If done so, restart the unit.
- Recommended to restart the unit if Switching program(SWPG) is changed during normal operation for proper functionality in accordance with the chosen control mode.
- When condition of low current occurs, the display of controller will show the 'CURR'.

LEVEL 2				
Display	Description	Default Value	Range	Condition
O.VLT	Over voltage	ON	ON / OFF	
OV.S	Over voltage setting	256(L-N) 540(L-L)	256V to 264V (L-N) 540V to 570V (L-L)	This option will be prompted only when O.VLT option made ON.
U.VLT	Under voltage	OFF	ON / OFF	
UV.S	Under voltage setting	195(L-N) 380(L-L)	195V to 204V (L-N) 380V to 480V (L-L)	This option will be prompted only when U.VLT option made ON.
O.CMP	Over compensation	ON	ON / OFF	
U.CMP	Under compensation	ON	ON / OFF	
CT.ER	CT Polarity error	ON	ON / OFF	
H.VLT	Hysteresis voltage	2	1% to 10%	
H.PF	Hysteresis power factor	1	1% to 5%	
DFLT	Factory Default	No	No / Yes	

LEVEL 3				
Display	Description	Default Value	Range	Condition
RL.01	Bank 1	OFF	ON / OFF	Prompted only if MODE is set to MANUAL
RL.02	Bank 2	OFF	ON / OFF	
RL.03	Bank 3	OFF	ON / OFF	
RL.04	Bank 4	OFF	ON / OFF	
RL.05	Bank 5	OFF	ON / OFF	
RL.06	Bank 6	OFF	ON / OFF	
RL.07	Bank 7	OFF	ON / OFF	
RL.08	Bank 8	OFF	ON / OFF	
* RL.09	Bank 9	OFF	ON / OFF	
* RL.10	Bank 10	OFF	ON / OFF	
* RL.11	Bank 11	OFF	ON / OFF	
* RL.12	Bank 12	OFF	ON / OFF	

* Applicable only for APFC147-112

WIRING DIAGRAM

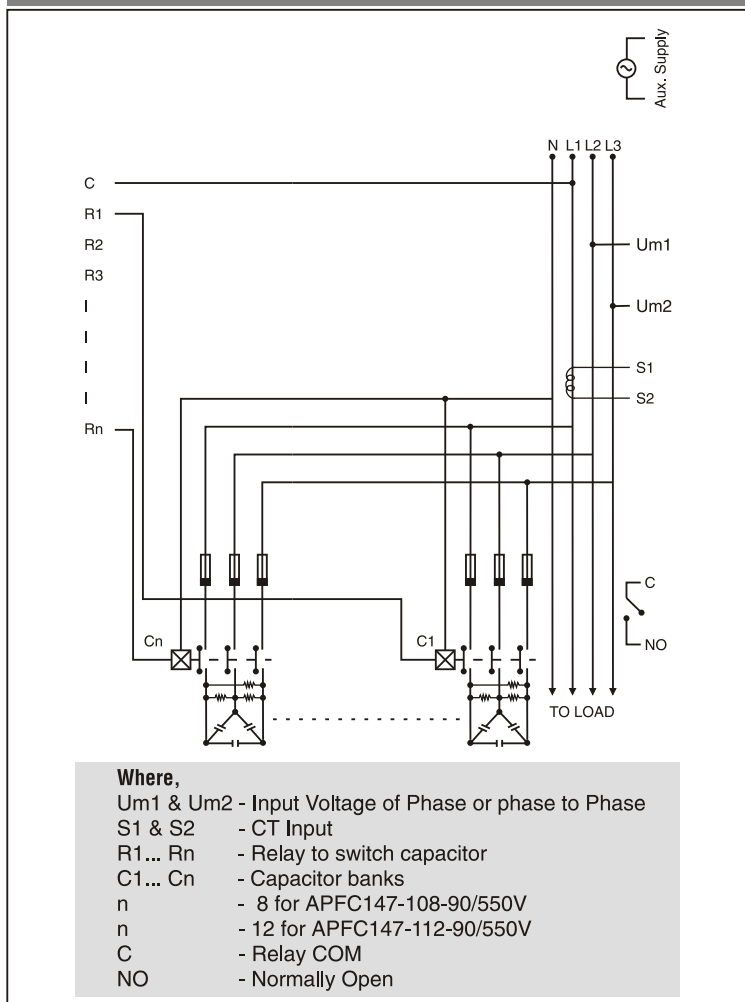

PHASE-ANGLE SETTING

Voltage	L1-N	L2-N	L3-N	L1-N	L2-N	L3-N	L1-N	L2-N	L3-N
CT	L1	L2	L3	L2	L3	L1	L3	L1	L2
Phase-Angle	0°	0°	0°	240°	240°	240°	120°	120°	120°
Voltage	L2-L3	L3-L1	L1-L2	L2-L3	L3-L1	L1-L2	L2-L3	L3-L1	L1-L2
CT	L1	L2	L3	L2	L3	L1	L3	L1	L2
Phase-Angle	90°	90°	90°	330°	330°	330°	210°	210°	210°

(Specifications are subject to change, since development is a continuous process.)

Selec Controls Pvt. Ltd., India

Factory Address :
 EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400 710, INDIA.
 Tel. No. : +91-22-41 418 419/430 I Fax No. : +91-22-28471733
 Toll free : 1800 227 353 (BSNL/MTNL Subscribers only)
 Website : www.selec.com I Email : sales@selec.com